

Quartz Zinc Installation Guide

The gutter range can be connected to the Quartz Zinc pipework system and secured by standard pipe clips. The assembly and installation must be considered individually depending on the project, although general aspects of preparation are common to all as shown below.



- Using a rule, make a chalkline setting the fall (min 1:200) towards the running outlet and required position of the downpipe.

- Cut the running outlet to the required length, starting from the rolled front edge.
- If possible install prefabricated outlet first due to movement when jointing lengths

- Use the Quartz Zinc adhesive to seal and fix the stop end. To avoid cuts from edges, always wear gloves when handling zinc components.



- Always use two concealed brackets to secure the running outlet.

- Do not fix brackets to the fascia until gutter is joined to the next length.
- Firmly fix the prepared running outlet according to the chalkline.

- As for the running outlet, when cutting gutter to the required length, always saw from the rolled front edge first.




- Clip concealed brackets to the cut lengths of gutter at 400mm max centres.

- Secure each bracket to the gutter by folding in the two tabs. Then thoroughly clean the gutter joints before gluing.

- Apply two, thin, parallel beads of Quartz Zinc adhesive to the inner surface of the running outlet at max 50mm from the edge.

Quartz Zinc Installation

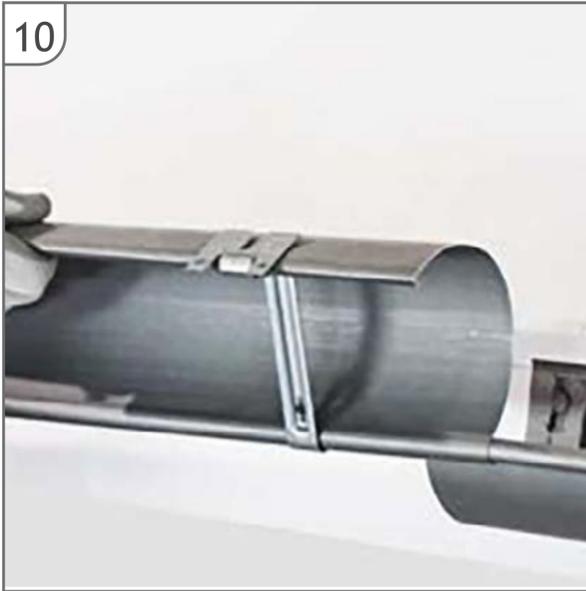

- Insert the prepared gutter into the already installed running outlet via the rolled front edge first. Ensure a 50mm min overlap. Pliers can be used to ease open the beading on installed gutter.



- Fix the gutter brackets according to the chalkline.




- Finally, fit the other stop end.

Installing the downpipes



- Take two bends and measure the distance from the wall.

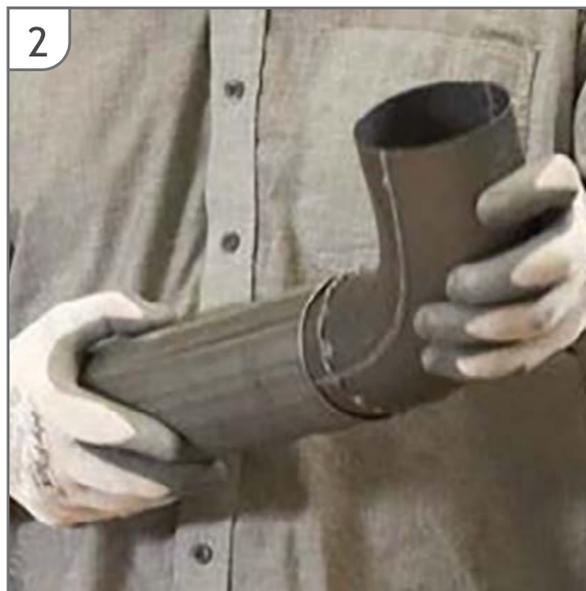

- Once measured, fit the two bends together. It may be necessary to extend the assembly using a piece of downpipe.



- At downpipe joints, mark positions for the v-locks at every 2 metres (maximum). Then firmly screw-fix the v-lock to the wall.



- Place the self-locking bracket on the end of each pipe, then slide the assembly neatly into the v-lock to complete the installation.

Important information

- The end/last fascia bracket on the gutter run should be placed 30 cm from the gutter end or corner. (Brackets at 400mm centres). Gutter angles are supported by two unions and don't require their own fascia bracket.
- Wear gloves when installing.
- N.B. NEVER CUT WITH A SPINNING BLADE - zinc fumes released when galv steel is heated are toxic