

# STORMFLO

## 200mm GUTTER SYSTEM



One of the biggest PVC rainwater systems around. Stormflo offers an impressive flow rate of up to 14l/s making it a GOOD choice for even the largest of roof areas.

### GUTTER



	Code	Pack	£.Each
4 metre	GR740	2	122.80
	BR740	2	122.80

### JOINT BRACKET



	Code	Pack	£.Each
	GR708	6	35.61
	BR708	6	35.61

### SUPPORT BRACKET



2 screw fixing

Fix at 800mm centres - max

	Code	Pack	£.Each
	GR710	5	15.62
	BR710	5	15.62

### RUNNING OUTLET



	Code	Pack	£.Each
	GR711	1	73.12
	BR711	1	73.12

Spigot fits 160mm pipe.

### 90° ANGLE

See page 98 for special fabrications.



	Code	Pack	£.Each
	GR705	1	110.00
	BR705	1	110.00

Remember: order 2 Joint Brackets.

### 135° ANGLE



	Code	Pack	£.Each
	GR707	1	110.00
	BR707	1	110.00

Remember: order 2 Joint Brackets.



OUTLET ADAPTOR



Code Pack £.Each

GR716	2	16.72
BR716	2	16.72

For 110mm Highflo downpipes.

EXTERNAL STOPEND



Code Pack £.Each

GR713	2	30.49
BR713	2	30.49

Remember: order 1 support bracket.

**GOOD TO KNOW**



Need a Stopend Outlet?



Cut external stopend



Place into running outlet

**JOBS A GOOD'UN™**

G GREY

B BLACK

Each product code is prefixed with a colour.

Example BR125, where 'B' = BLACK



Designed for increased protection against snow loading and wind updrafts

### DOWNPIPE



	Code	Pack	£.Each
3 metre	BS534	1	107.51
	GS534	1	107.51
4 metre	GS535	1	142.17

### BRACKET - PIPE



Fix at 2m  
centres  
- max

	Code	Pack	£.Each
	BS412	10	12.00
	GS412	10	12.00

### BRACKET - PIPE/SOCKET



Fix at 2m  
centres  
- max

	Code	Pack	£.Each
	GS571	5	19.50


Galvanised.

### SOCKETED DOWNPIPE



	Code	Pack	£.Each
3 metre	BS533	1	126.76
	GS533	1	126.76

### 92½° BEND

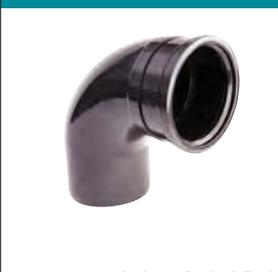

	Code	Pack	£.Each
	BS403	1	65.24
	GS403	1	65.24

### 112½° TOP OFFSET BEND



	Code	Pack	£.Each
	BS424	1	73.56
	GS424	1	73.56

### 112½° BOTTOM OFFSET BEND



	Code	Pack	£.Each
	BS425	1	73.56
	GS425	1	73.56

### 135° BEND



	Code	Pack	£.Each
	BS404	1	65.24
	GS404	1	65.24

### PIPE CONNECTOR



	Code	Pack	£.Each
	BS406	1	28.09
	GS406	1	28.09

160mm

ACCESS PIPE



Code	Pack	£.Each
BS472	1	87.53
GS472	1	87.53

92½° BRANCH



Code	Pack	£.Each
GS427	1	135.32
BS427	1	135.32

SHOE




Code	Pack	£.Each
BS436	1	65.24
GS436	1	65.24



**GOOD TO KNOW**

**Offsets**

- 1. Pushfit Points up!**  
Your pushfit socket would always point upwards.
- 2. Don't screw - glue!**  
Secure your pushfit sockets with solvent cement.
- 3. Always support!**  
Install bracket as close to the offset as possible.

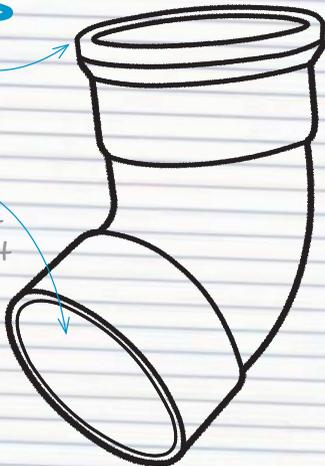

REDUCER



160x110mm

Code	Pack	£.Each
GS420	1	47.35

**GOOD TIP**

Want to connect to 110mm drain?  
Use an Outlet Adaptor (R716) to connect Stormflo to 110mm downpipe, see p34



GREY



BLACK

Each product code is prefixed with a colour.

Example BR125, where 'B' = BLACK

**JOBS A GOOD'UN™**