



Flat Aluminium Coping Fixing Instructions

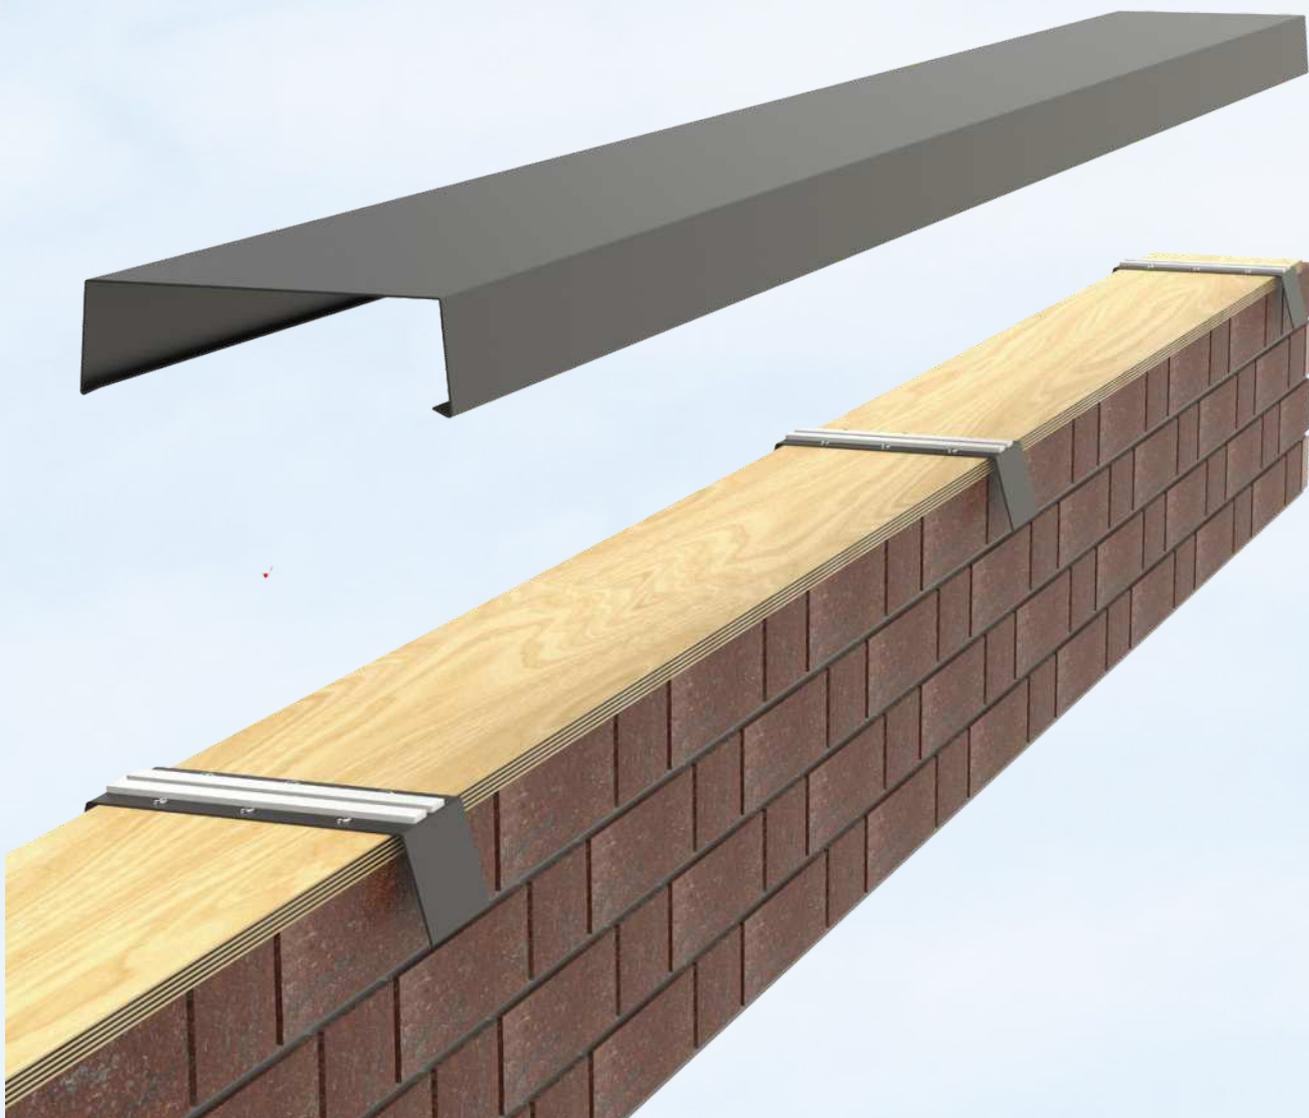

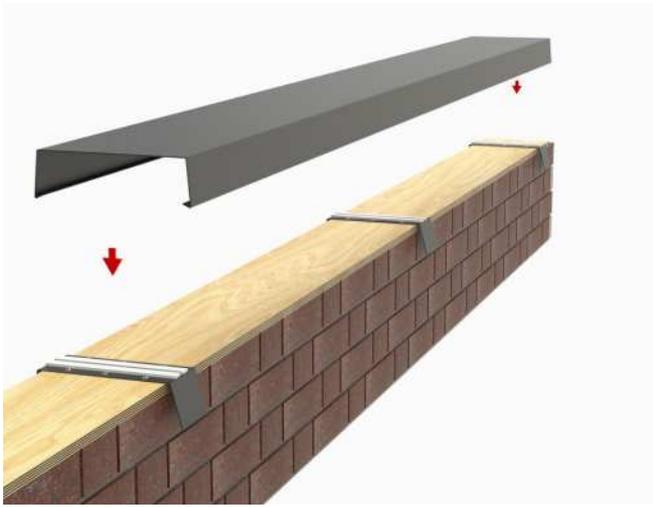

1. Ensure wall is fitted with suitable marine ply and weatherproof membrane prior to installation. (Provided by others)

2. Set EPDM Sealed Jointing Brackets at the end of each run, setting out jointing brackets for all lengths/angles in between.

3. Fix any Half Brackets on corners.

4. All brackets must be fixed in all fixing holes.

5. Fix first corner if applicable. Clip the back edge of the coping under the bracket first, and slowly press the coping down into place. Repeat this for all lengths and components.



6. Please allow a gap of up to 30mm from the wall on both sides of the coping.

7. If higher than 7m, use a mechanical fixing on the inside edge of the coping to ensure full security.

8. Work away from all corners, cutting down the last length of the coping to suit. Coping should be cut using a circular saw. Use touch up paint on all cut ends.

9. Allow a 2mm Expansion gap between all joints.

