

Aqualine Gutter Installation

Aqualine



1. Mark fixing hole using set square to check correct alignment



2. Pilot drill 2 number 3.5mm diameter holes

Aqualine



3. Fix fascia bracket with appropriate screws



4. Use shims as required behind brackets for alignment

Aqualine



5. Locate gutter onto brackets




6. Pre-insert slide lock bars (pair)

Aqualine



7. Insert Aqualine tool between bracket and gutter bottom edge

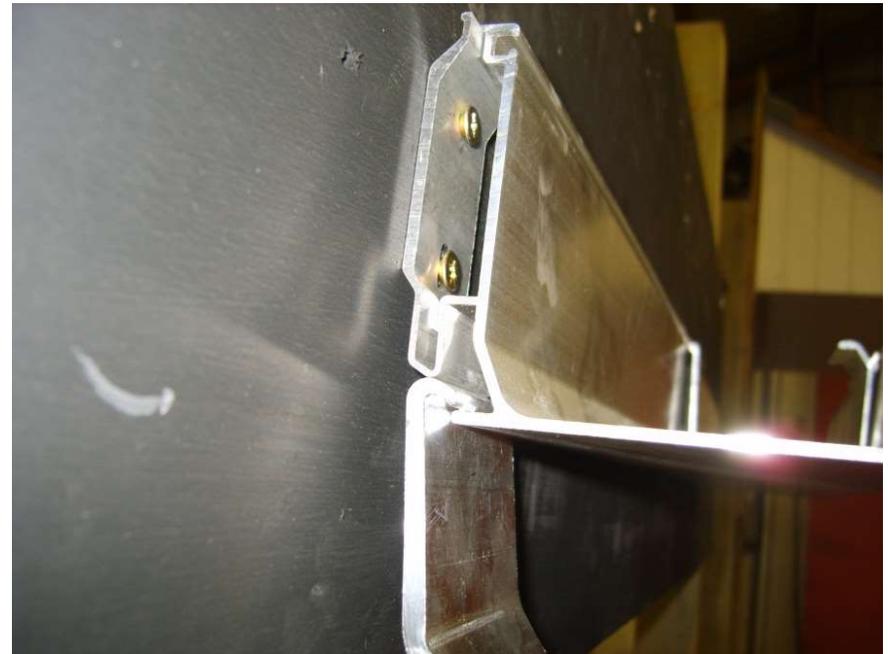

8. Rotate tool downward, this will click the gutter into place

Aqualine



9. Lubricate union clip prior to inserting with P80 spray



10. Compress union and slide rear lock bar across joint

Aqualine




11. Using the Aqualine tool in a rotational upwards and downward direction on the front lip of the gutter, apply force to push the union down inside the gutter



12. Using index finger move side lock over union clip so that the union is locked in place

Aqualine

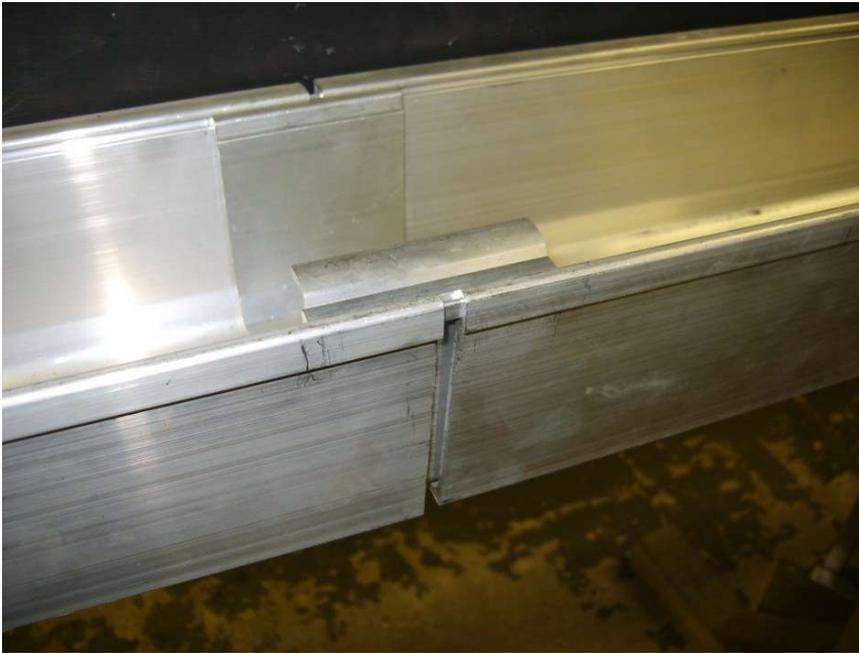

13. Leave 3 to 4mm gap for expansion to take place



14. Dry gutter and apply DOW 791 silicone to weather edge of union